


Accessories List

Current Transformer



For user consumption
metering in Single-phase
M-Combiner (MC100/
MC100L)

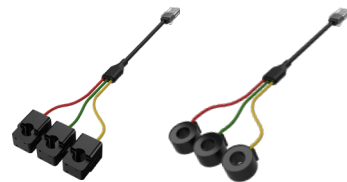

For user consumption
metering in Three-
phase M-Combiner
(MC100-T)



CT extension cable
(15 m)

Parameters	Solid-core CTs	Split-core CTs
Nominal frequency	50/60 Hz	50/60 Hz
Nominal primary current	80 A	80 A
Turns ratio	2000:1	2000:1
Rated load	10 Ω	20 Ω
Accuracy	≤0.1%	≤0.5%
Dimensions	29.5 mm x 16 mm	36 mm x 47 mm
Aperture	13.5 mm	16 mm
Cable length	5,000±100 mm	5,000±80 mm
Operation temperature	-30 to 85°C	-20 to 60°C
Altitude	4000 m	3000 m

Disconnect Tools



Used to disconnect PV DC connectors and AC connectors

- ① For disconnecting the AC cable connector
- ② For disconnecting the DC cable connector

M-Cable


Model	MW-025013-A	MW-025023-A	MW-025020-B0	MW-025210-B0
Type	Three-terminal AC cable		Two-terminal AC cable	
Copper conductor and length	 0.45 m, 1.5 mm ² 1.3 m, 2.5 mm ²	 0.45 m, 1.5 mm ² 2.3 m, 2.5 mm ²	 2 m, 2.5 mm ²	 20 m, 2.5 mm ²
Temperature	90 °C			
Voltage rating	600 V (connector rating 277 V)			
Maximum nominal voltage	277 Vac			
Scenario	Installation of PV modules in portrait	Installation of PV modules in landscape	AC extension cable (male/female)	AC extension cable (female/female)

Junction Adaptor

A quick connector to replace traditional rooftop junction boxes



Single-phase junction adaptor

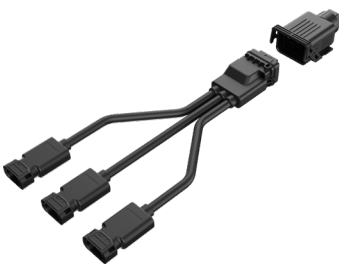

Three-phase junction adaptor

Terminal Caps

Diagram	Type	Description
	Microinverter DC connector sealing cap (positive pole)	Usually covers the DC connector of the microinverter. When the microinverter needs to be installed, the sealing cap needs to be removed.
	Microinverter DC connector sealing cap (negative pole)	Usually covers the DC connector of the microinverter. When the microinverter needs to be installed, the sealing cap needs to be removed.
	Microinverter AC connector sealing cap	Usually covers the AC connector of the microinverter. When the microinverter needs to be installed, the sealing cap needs to be removed.
	M-Cable AC connector sealing cap	When connecting AC cables, cover the unused AC connectors.